


Comfort System, with Alarm System,

from September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

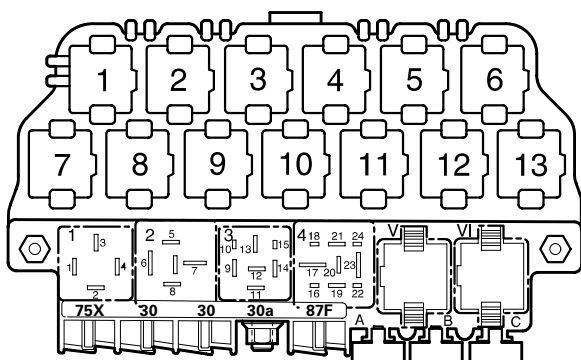


97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

2 Relay for motor remote unlock rear lid (79)

Relay panel:

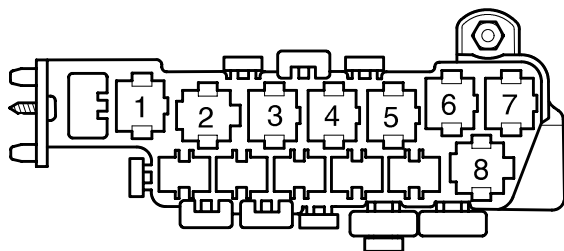


97-20515

Relay location on the eightfold auxiliary relay panel, behind relay panel:

Fuse colors


30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Note: Number in parentheses indicates production control number stamped on relay housing.

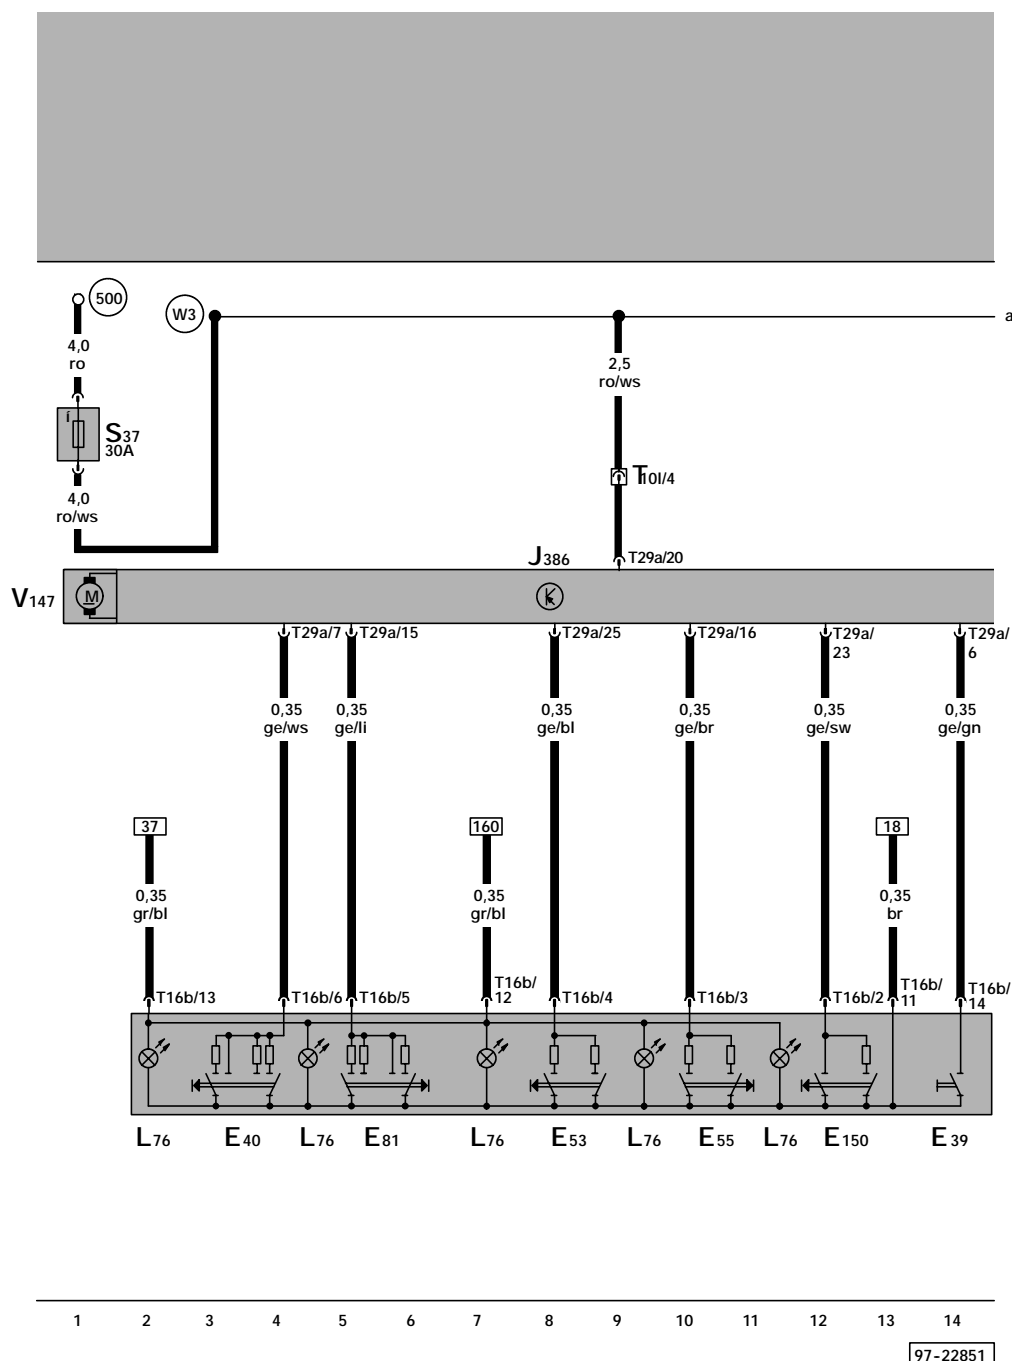

- E39 - Safety switch for window regulator rear (00916)
- E40 - Switch for window regulator front left (00912)
- E53 - Switch for window regulator rear left, driver (00914)
- E55 - Switch for window regulator rear right, driver (00915)
- E81 - Switch for window regulator front right, driver (00913)
- E150 - Switch for interior lock, driver side (01358)
- J386 - Door control module, driver side (01331)
- L76 - Push button light
- S37 - Power window fuse
- T10I - 10-pin connector, black, connector station A-pillar left
- T16b - 16-pin connector
- T29a - 29-pin connector
- V147 - Motor for window regulator, driver side


- (500) - Screw connection -1- (30), on relay panel
- (W3) - wire connection, in rear wiring harness

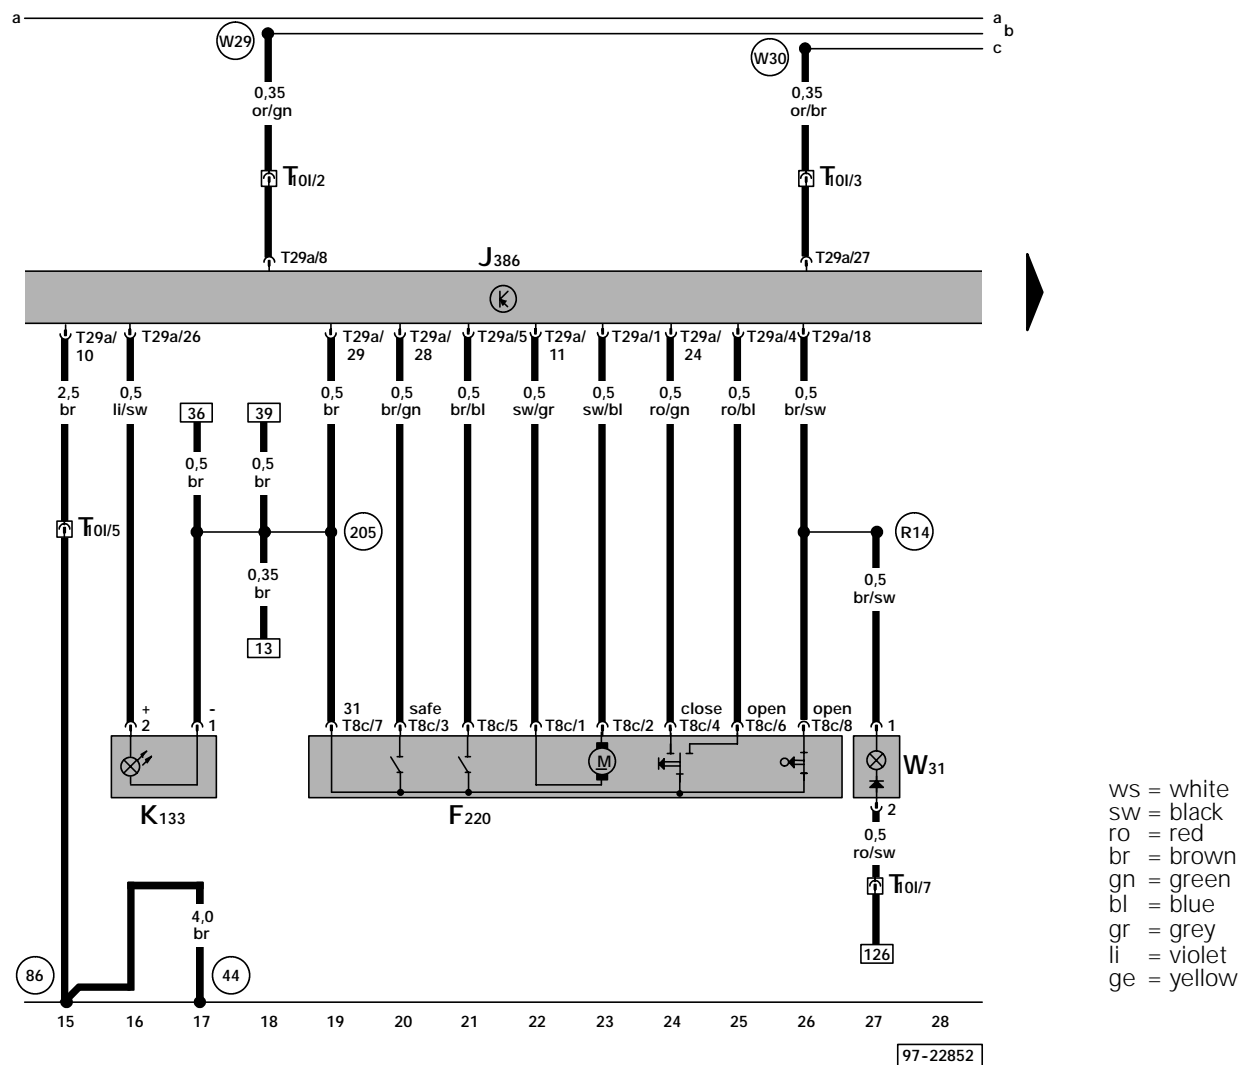

F220 - Lock unit for central locking, driver side
J386 - Door control module, driver side
K133 - Warning light for central locking -SAFE-
T8c - 8-Pin Connector, black
T10I - 10-Pin Connector, black, connector station
A-pillar, left
T29a - 29-Pin Connector
W31 - Entry light front, left


(44) - Ground connection, on left A-pillar, lower part
(86) - Ground connection -1-, in rear wiring harness
(205) - Ground connection, in driver's door wiring harness
(R14) - wire connection -1- (open), in driver's door wiring harness

(W29) - Plus connector -2- (A-Bus), in wiring harness, floor
(W30) - Plus connector -2- (B-Bus), in wiring harness, floor

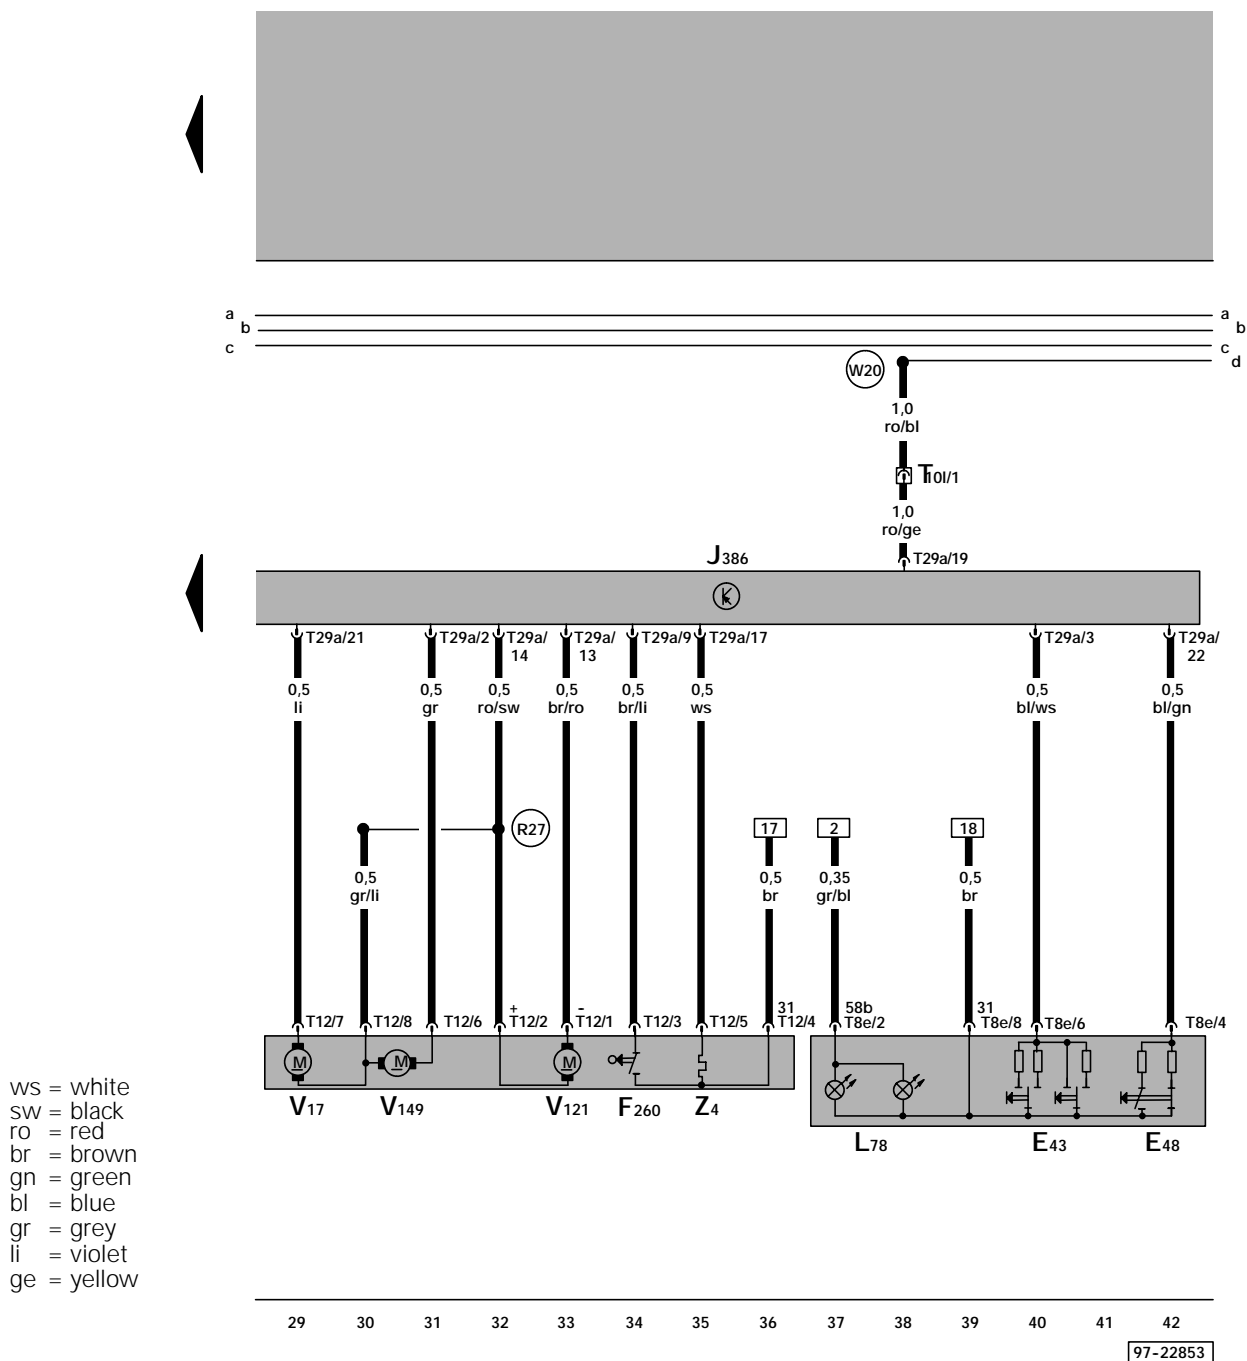


- E43 - Mirror Adjustment Switch
- E48 - Mirror Selector Switch
- F260 - Driver's Mirror Adjustment Contact Switch
- J386 - Door control module, driver side
- L78 - Mirror Adjusting Switch Light
- T8e - 8-Pin Connector
- T10l - 10-Pin Connector, black, connector station A-pillar, left
- T12 - 12-Pin Connector
- T29a - 29-Pin Connector
- V17 - Driver's Side Mirror Adjustment Motor
- V121 - Motor for fold-in mirror, driver side
- V149 - Motor for mirror adjustment, driver side
- Z4 - Heated outside mirror, driver side

- (R27) - wire connection (power mirror), in driver's door wiring harness
- (W20) - Plus connector (30a), in wiring harness, rear

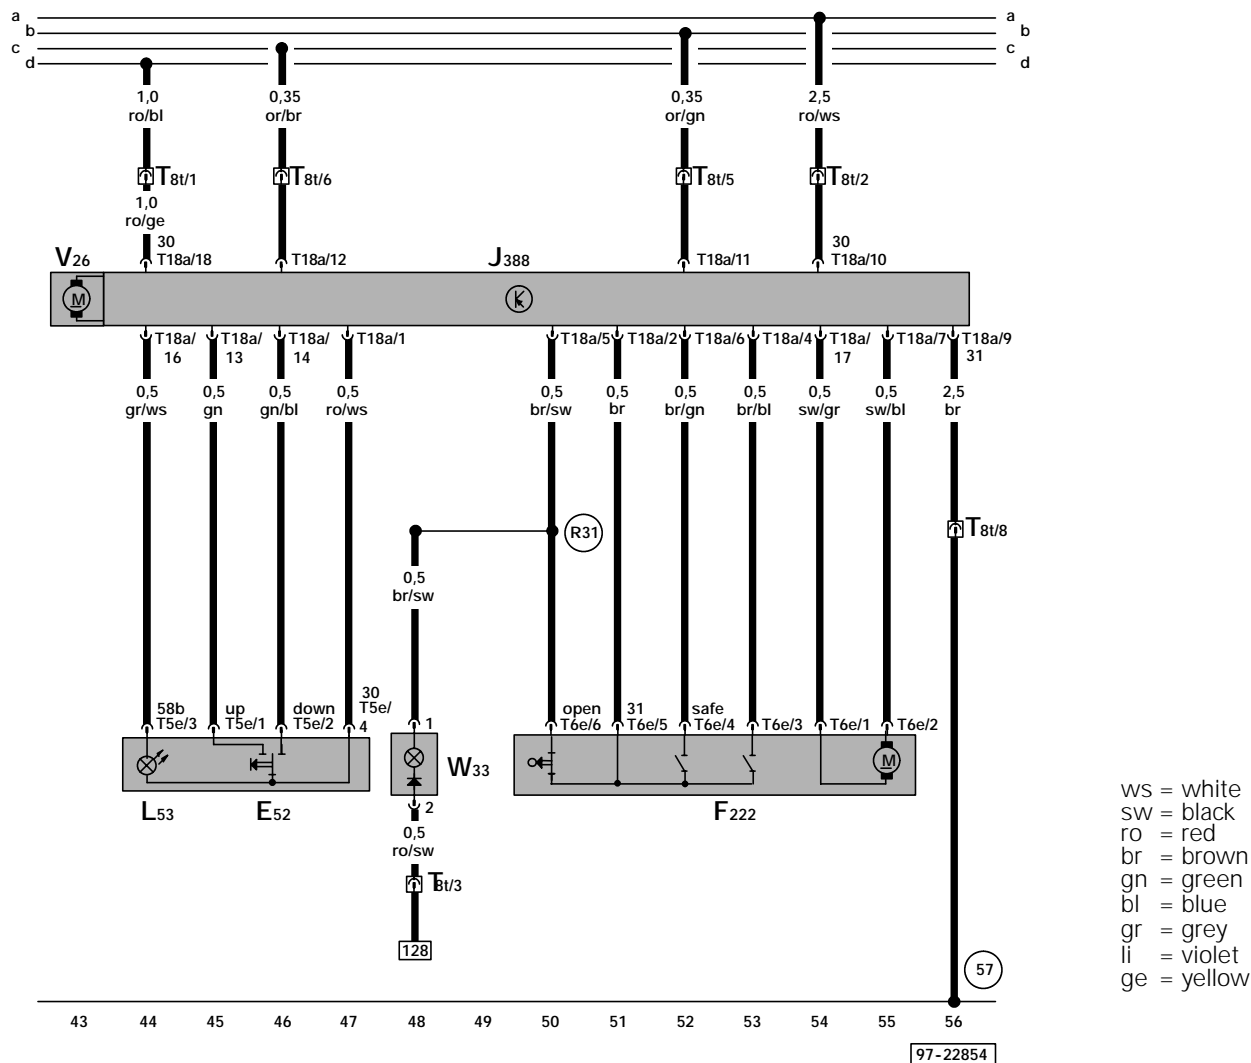

- E52 - Left Rear Window Switch, (In LR Door)
- F222 - Lock unit for central locking, rear, left
- J388 - Door control module, rear, left
- L53 - Power Window Switch Light
- T5e - 5-Pin Connector
- T6e - 6-Pin Connector, brown
- T8t - 8-Pin Connector, black, connector station B-pillar, left
- T18a - 18-Pin Connector
- V26 - Motor for window regulator, rear, left
- W33 - Entry light rear, left

- (57) - Ground connection, on left rear pillar
- (R31) - Wire connection -1-, in left rear door wiring harness

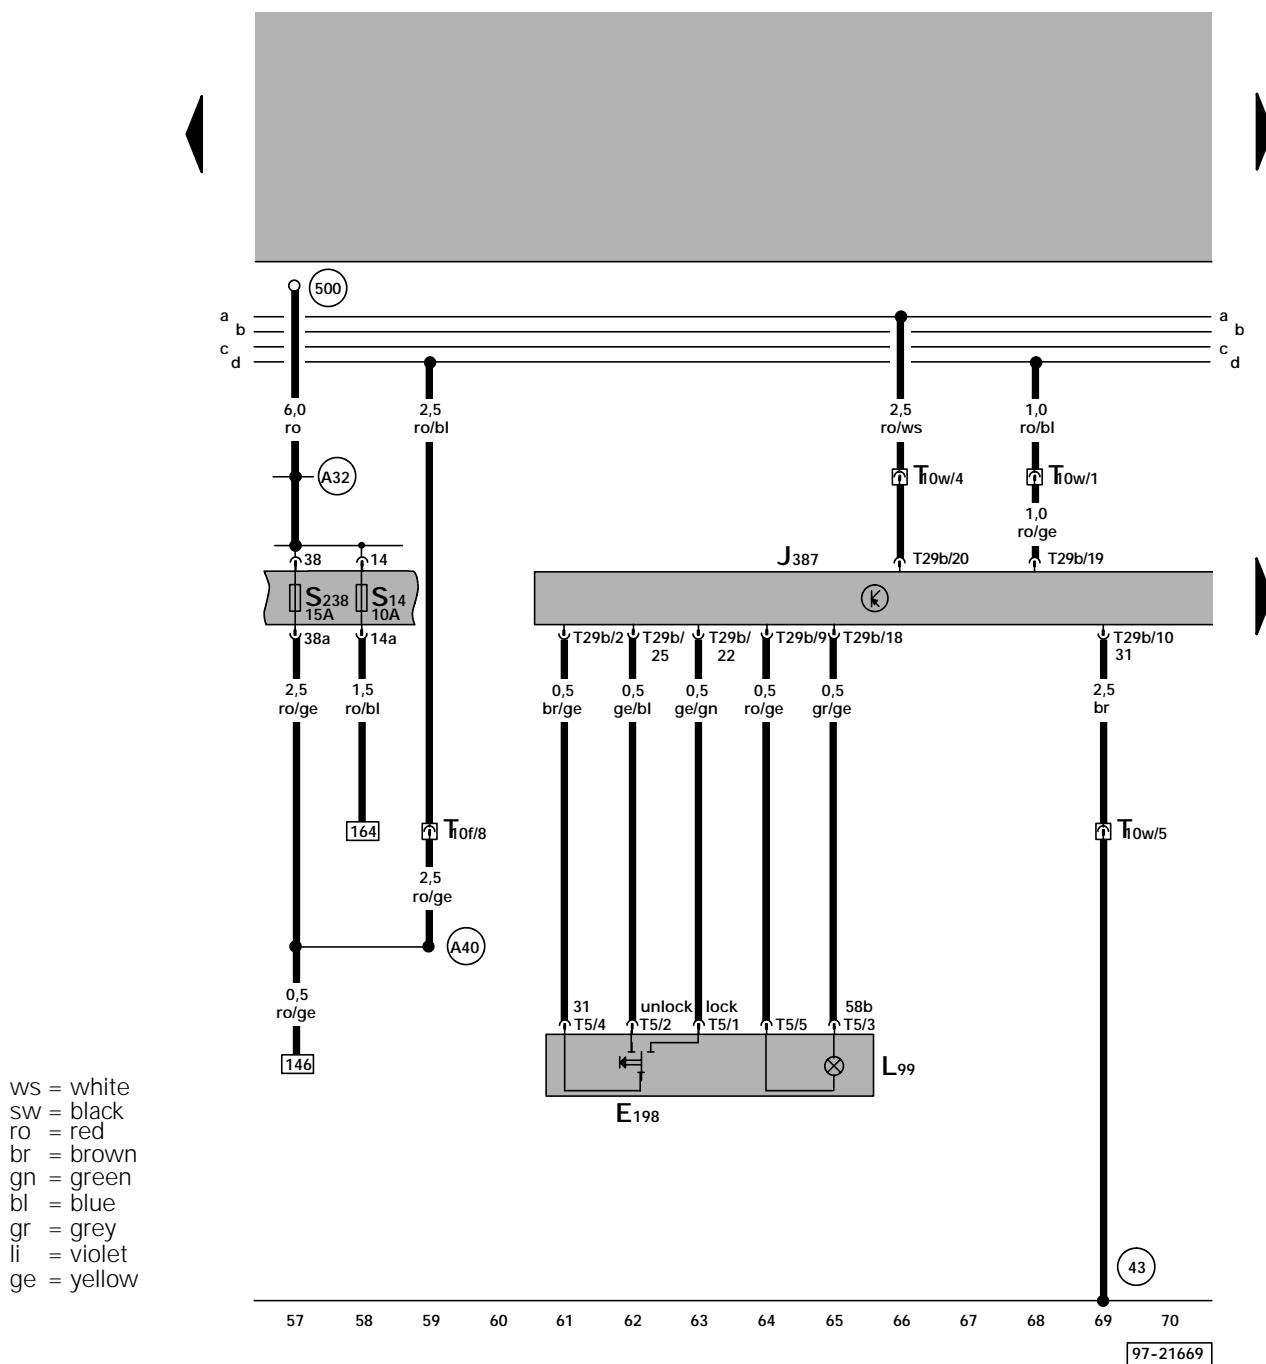

E198 - Switch for interior lock, passenger side
J387 - Door control module, passenger side
L99 - Lighting for switch interior lock
S14 - Fuse 14 in fuse holder
S238 - Fuse 38 in fuse holder
T5 - 5-Pin Connector
T10f - 10-Pin Connector, blue, connector station
A-pillar, left
T10w - 10-Pin Connector, black, connector station
A-pillar, right
T29b - 29-Pin Connector


(43) - Ground connection, on right A-pillar, lower part

(500) - Screw connection -1- (30), on relay panel

(A32) - plus connection (30), in instrument panel wiring harness
(A40) - plus connection -1- (30), in instrument panel wiring harness




a _____ a
b _____ b
c _____ c
d _____ d

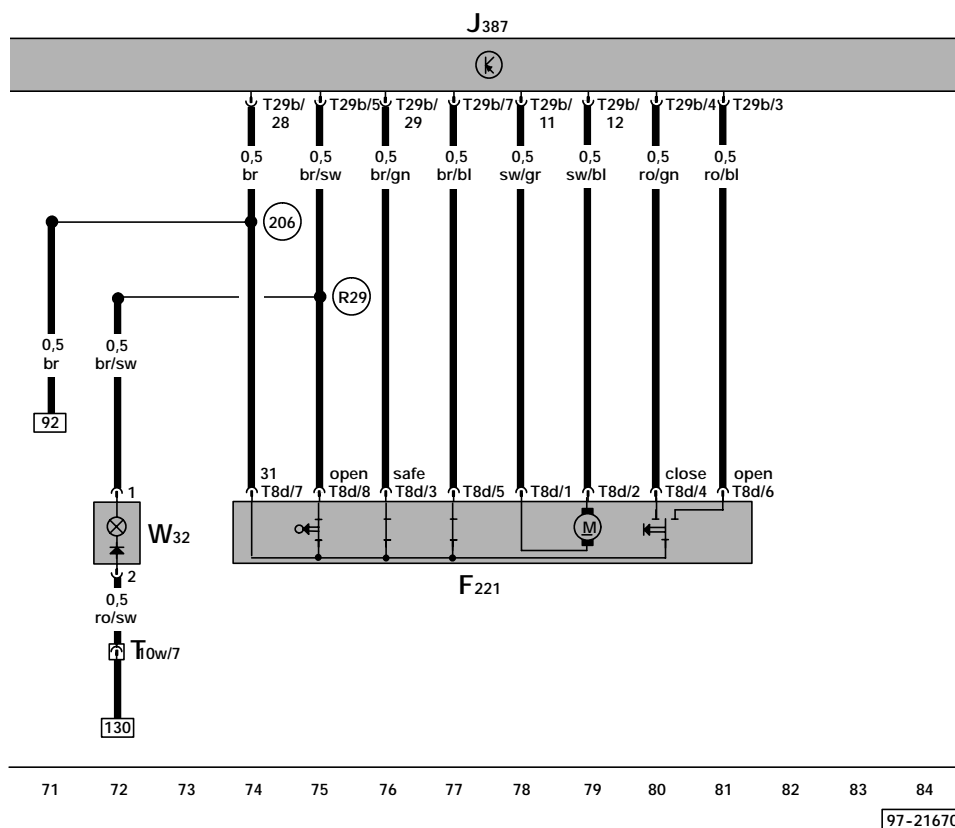

- F221 - Lock unit for central locking, passenger side
J387 - Door control module, passenger side
T8d - 8-Pin Connector, black
T10w - 10-Pin Connector, black, connector station
A-pillar, right
T29b - 29-Pin Connector
W32 - Entry light front, right

- (206) - Ground connection, in passenger's door wiring harness
(R29) - Wire connection -1- (open), in passenger's door wiring harness

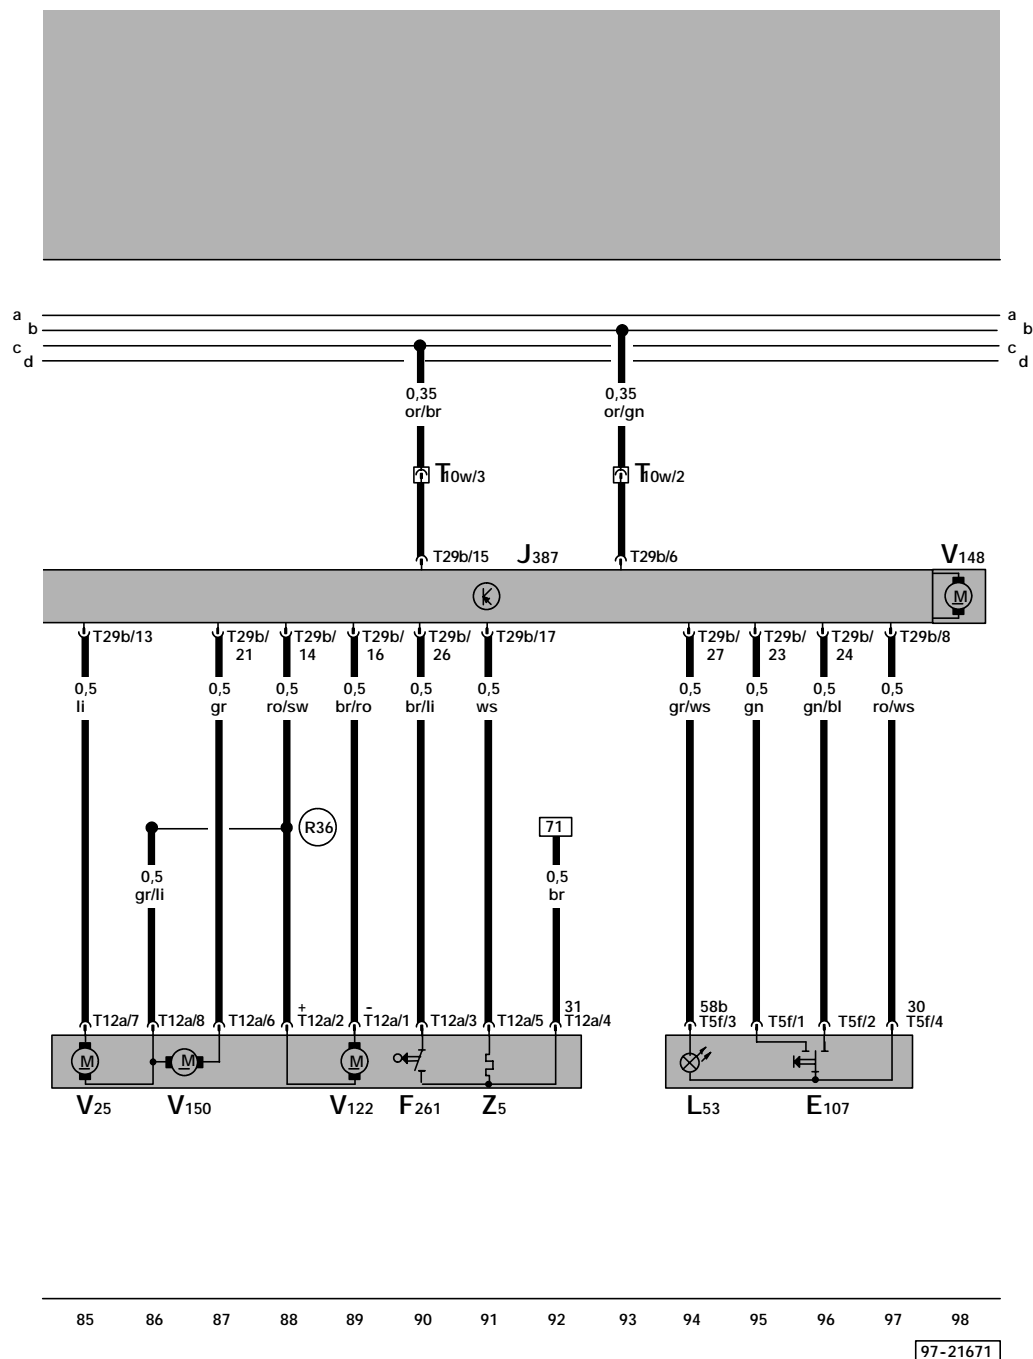


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E107 - Switch for window regulator, in passenger door (0936)
 F222 - Switch for window regulator, in passenger door (0936)
 F262 - Passenger's Mirror Tilt Contact Switch
 J387 - Door control module, passenger side
 L53 - Power Window Switch Light
 T5f - 5-Pin Connector
 T10w - 10-Pin Connector, black, connector station A-pillar, right
 T12a - 12-Pin Connector, black
 T29b - 29-Pin Connector
 V25 - Passenger's Side Mirror Adjustment Motor
 V122 - Motor for fold-in mirror, passenger side
 V148 - Motor for window regulator, passenger side
 V150 - Motor for mirror adjustment, passenger side

Z5 - Heated outside mirror, passenger side


(R36) - wire connection (power mirror), in passenger's door wiring harness

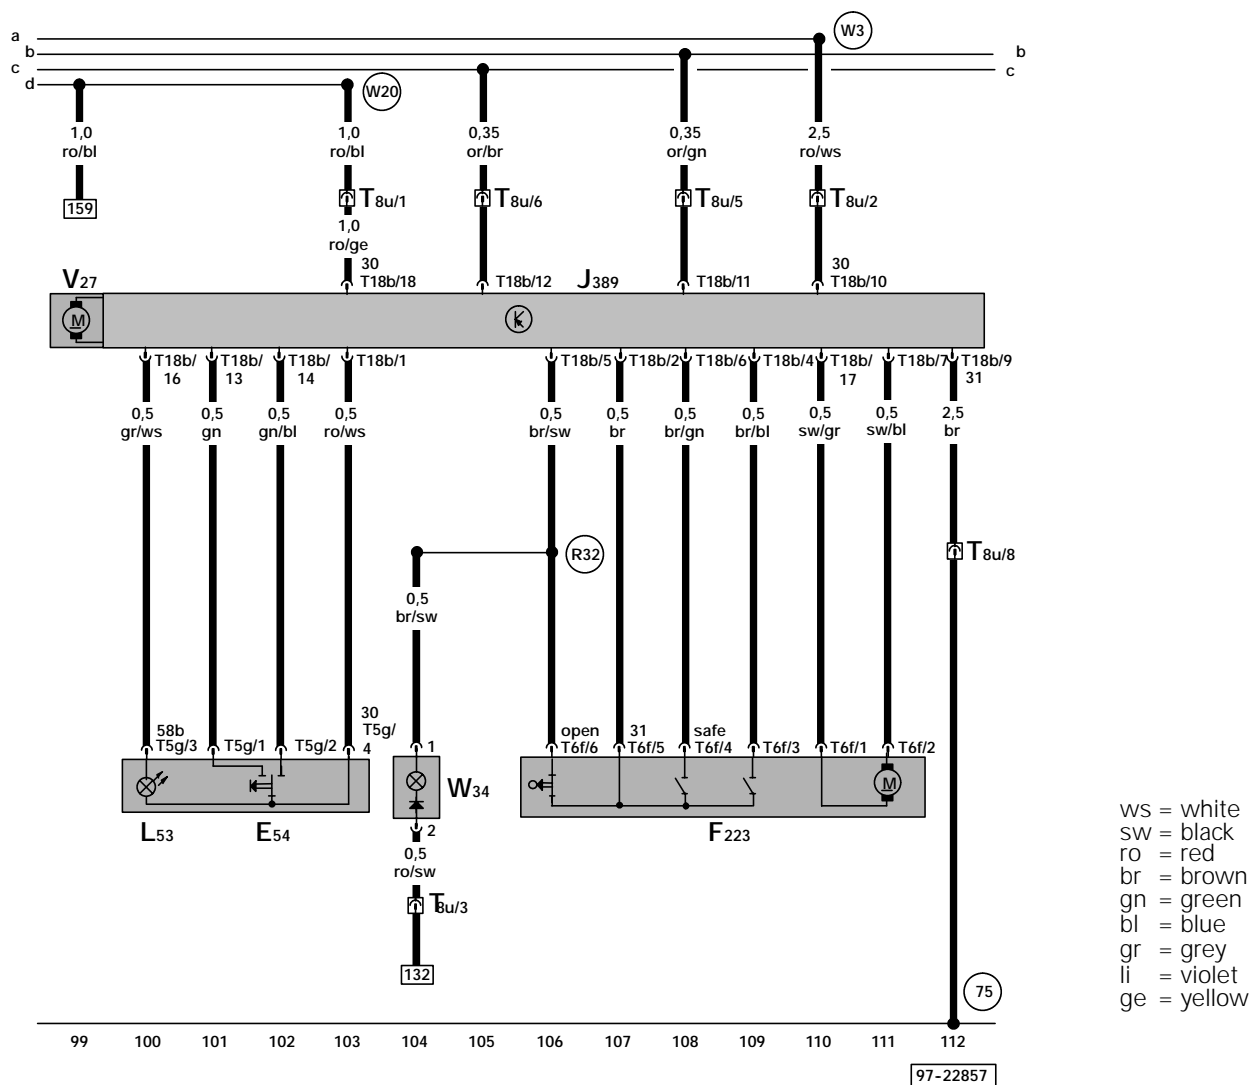

- E54 - Right Rear Window Switch, (In RR Door)
 F223 - Lock unit for central locking, rear, right
 J389 - Door control module, rear, right
 L53 - Power Window Switch Light
 T5g - 5-Pin Connector
 T6f - 6-Pin Connector
 T8u - 8-Pin Connector, brown, connector station
 T18b - 18-Pin Connector
 V27 - Motor for window regulator, rear, right
 W34 - Entry light rear, right

- (75) - Ground connection, on right rear pillar
 (R32) - Wire connection -2-, in right rear door wiring harness


- (W3) - wire connection, in rear wiring harness
 (W20) - Plus connector (30a), in wiring harness, rear

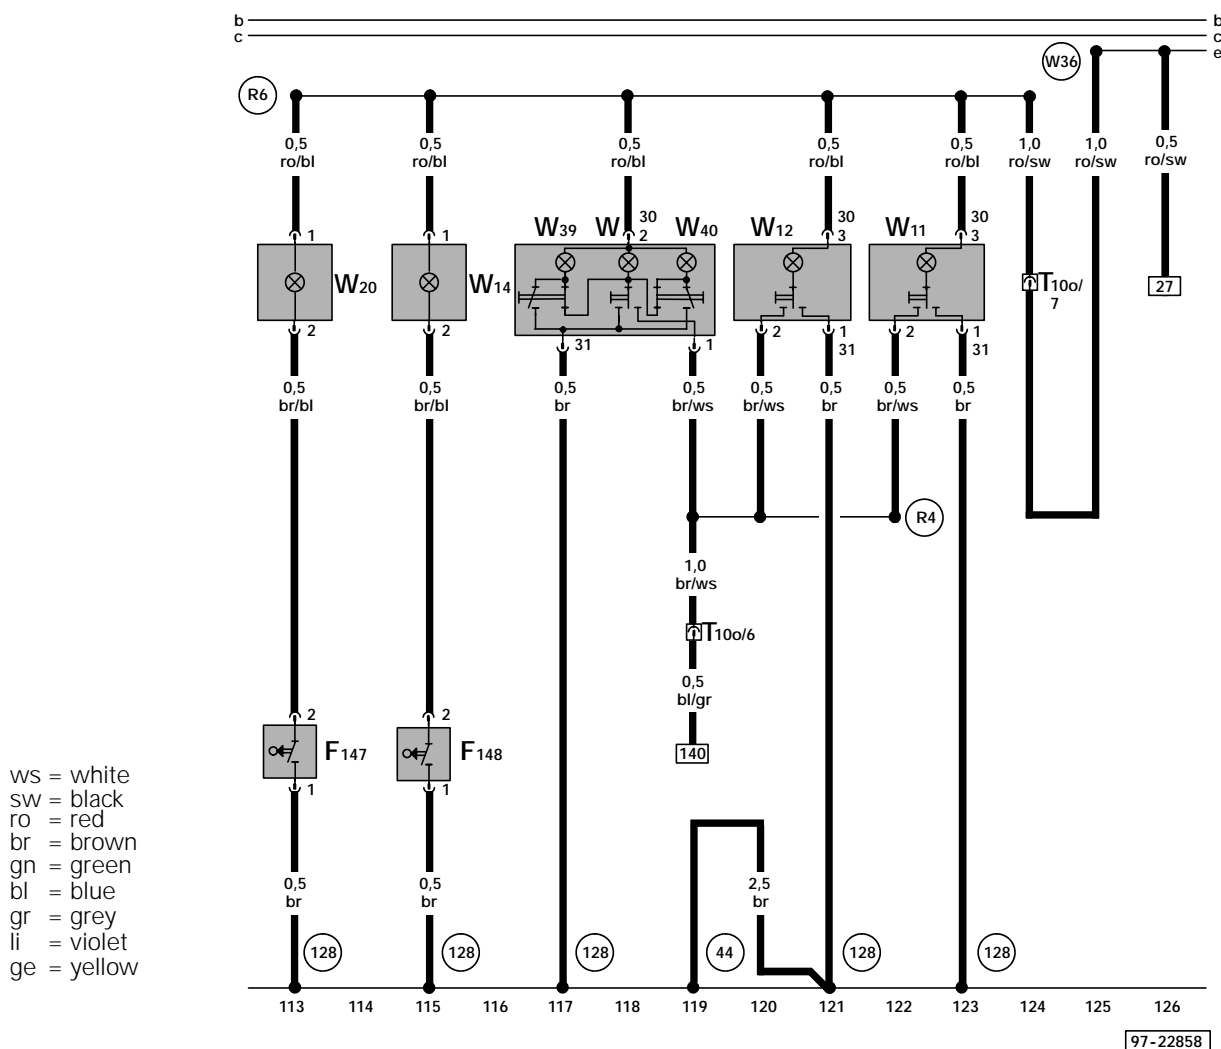

- F147 - Left Make-Up Mirror Light Switch
F148 - Right Make-Up Mirror Light Switch
T10o - 10-Pin Connector, red, connector station A-pillar, left
W - Front Interior Light
W11 - Left Rear Reading Light
W12 - Right Rear Reading Light
W14 - Right Make-up Mirror Light
W20 - Left Make-up Mirror Light
W39 - Reading light, center left
W40 - Reading light, center right

- (44) - Ground connection, on left A-pillar, lower part
(128) - Ground connection -1-, in interior light wiring harness

- (R4) - wire connection -1-, in interior light/door contact switch wiring harness
(R6) - plus connection -1-, in interior light wiring harness
(W36) - Plus connector (30a), in wiring harness floor

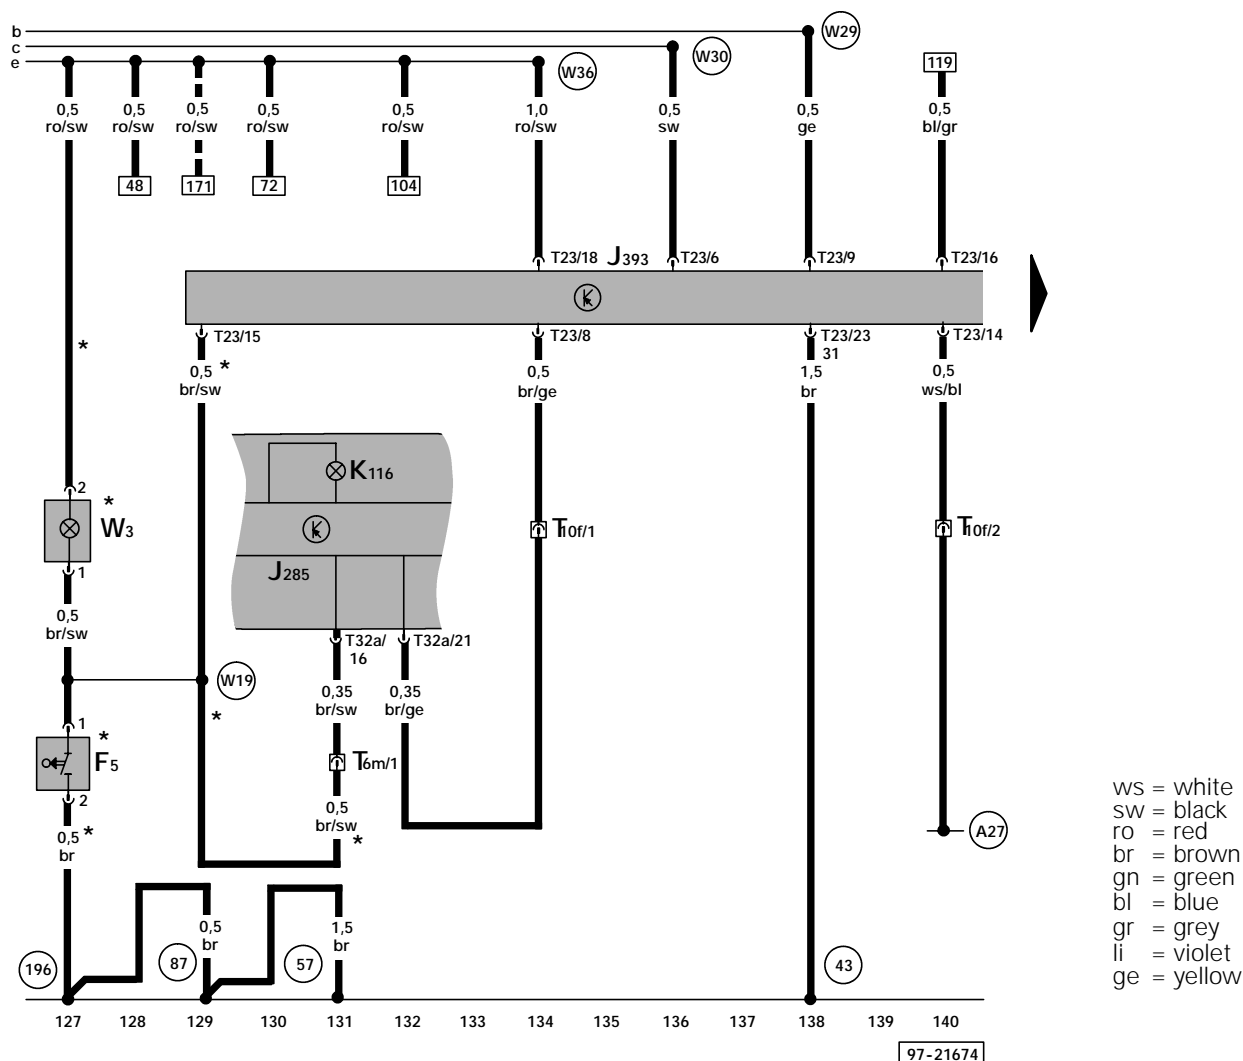


- F5 - Luggage Compartment Light Switch
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- K116 - Warning light for rear lid unlocked
- T6m - 6-Pin Connector, black, connector station A-pillar, right
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T23 - 23-Pin Connector
- T32a - 32-Pin Connector, blue, on instrument cluster
- W3 - Luggage compartment Light

- 43 - Ground connection, on right A-pillar, lower part
- 57 - Ground connection, on left rear pillar
- 87 - Ground connection -2-, in rear wiring harness
- 196 - Ground connection -3-, in wiring harness, rear


- A27 - Wire Connection (vehicle speed signal), in instrument panel wiring harness
- W19 - Connection -2- (luggage compartment light), in rear wiring harness
- W29 - Plus connector -2- (A-Bus), in wiring harness, floor
- W30 - Plus connector -2- (B-Bus), in wiring harness, floor
- W36 - Plus connector (30a), in wiring harness floor

* - sedan only

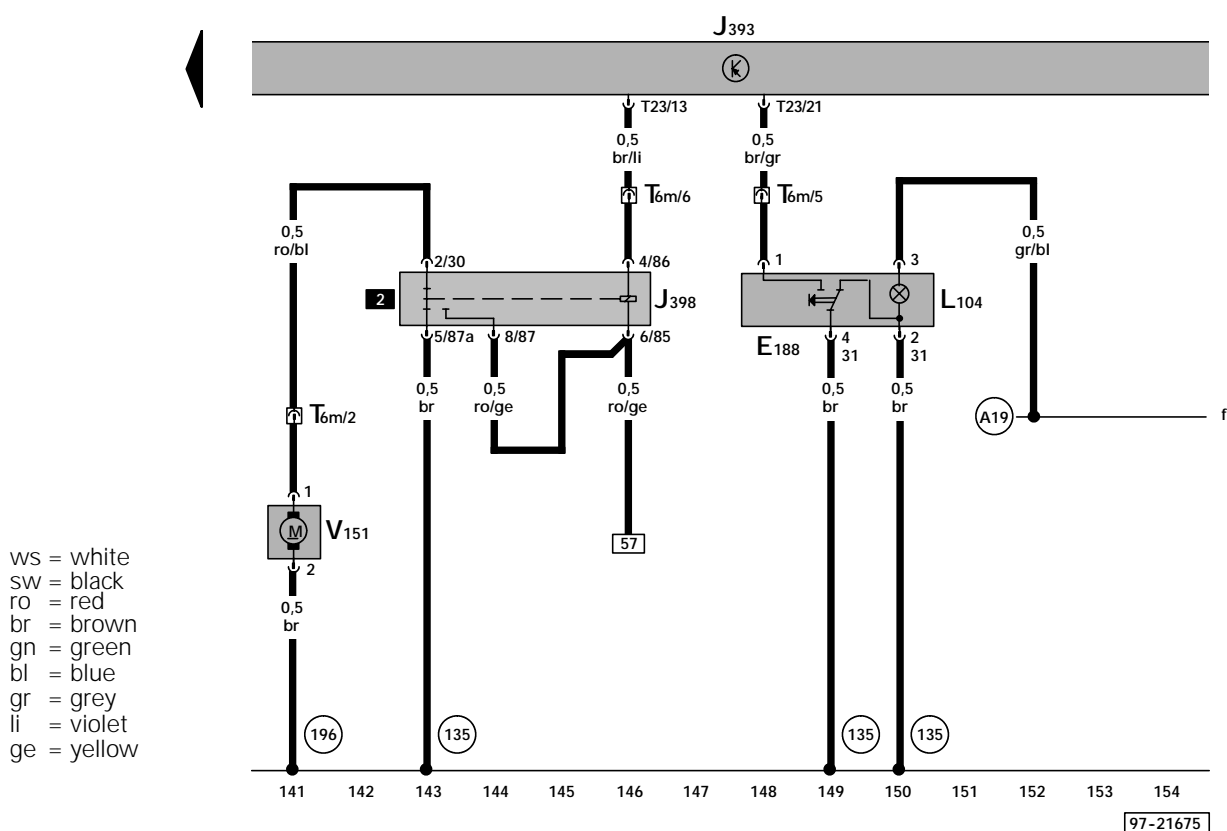


- E188 - Switch for remote unlock, rear lid
 J393 - Central control module for comfort system
 J398 - Relay for motor remote unlock rear lid, above relay panel, production control number (79)
 L104 - Illumination for switch remote unlock
 T6m - 6-Pin Connector, black, connector station A-pillar, right
 T23 - 23-Pin Connector
 V151 - Motor for remote unlock rear lid

- (135) - Ground connection -2-, in instrument panel wiring harness
 (196) - Ground connection -3-, in wiring harness, rear
 (A19) - wire connection (58d), in instrument panel wiring harness

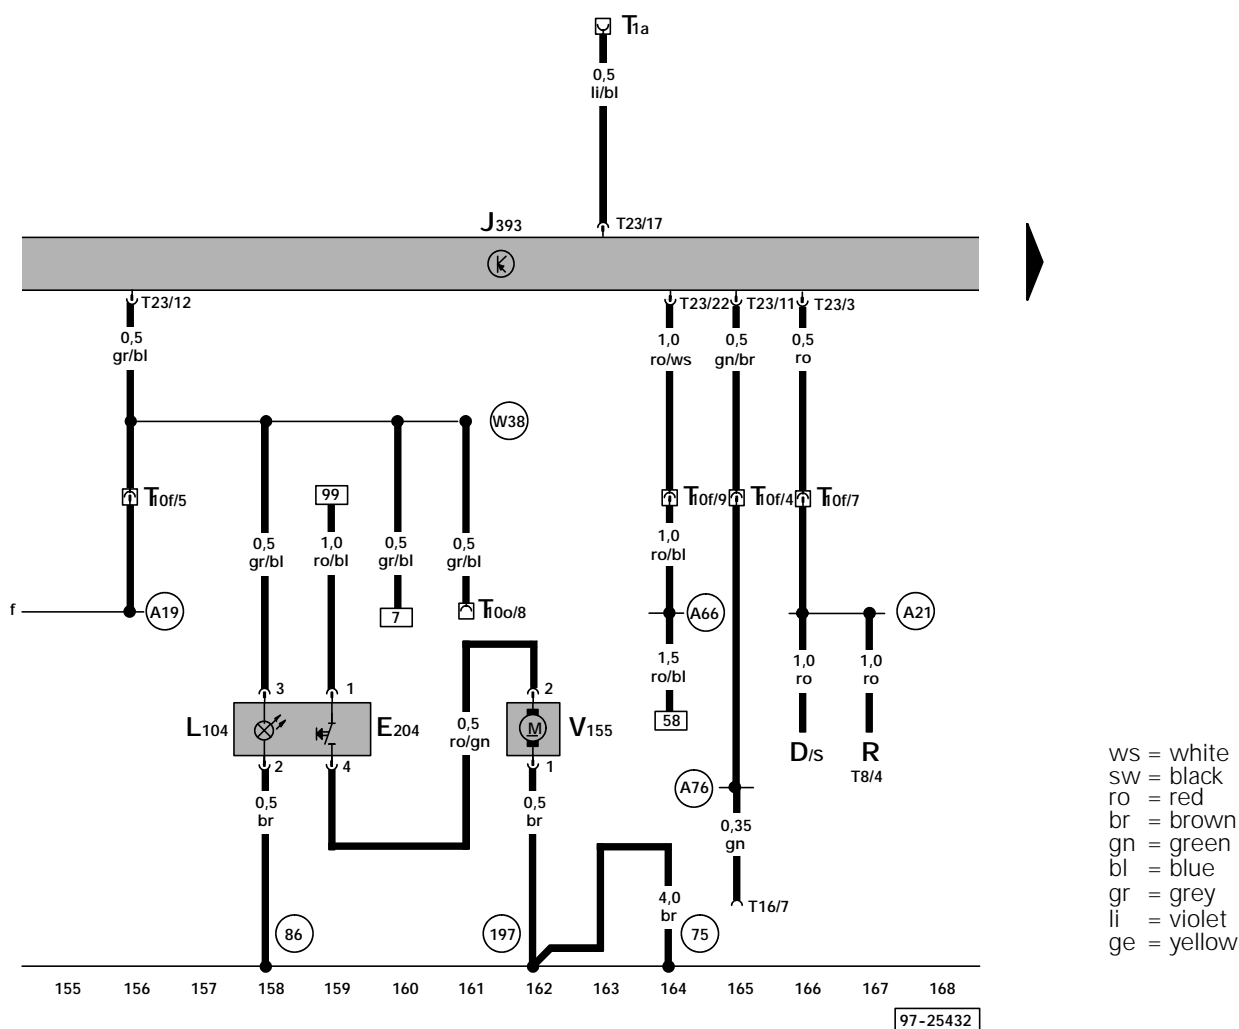


- D - Ignition/Starter Switch
E204 - Switch for remote/fuel tank door
J393 - Central control module for comfort system
L104 - Illumination for switch remote unlock
R - Radio
T1a - Single Connector
T8 - 8-Pin Connector, black, on radio
T10f - 10-Pin Connector, blue, connector station A-pillar, left
T10o - 10-Pin Connector, red, connector station A-pillar, left
T16 - 16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
T23 - 23-Pin Connector
V155 - Motor for fuel tank lid unlock
- (86) - Ground connection -1-, in rear wiring harness
(197) - Ground connection -4-, in wiring harness rear
(75) - Ground connection, on right rear pillar

- (86) - Ground connection -1-, in rear wiring harness
(197) - Ground connection -4-, in wiring harness rear
(A19) - wire connection (58d), in instrument panel wiring harness
(A21) - wire connection (86s), in instrument panel wiring harness
(A66) - Connector (30a, central locking/anti-theft warning system/IR), in instrument panel wiring harness
(A76) - Connector (K-diagnosis wire), in instrument panel wiring harness
(W38) - Connector (58d), in wiring harness floor

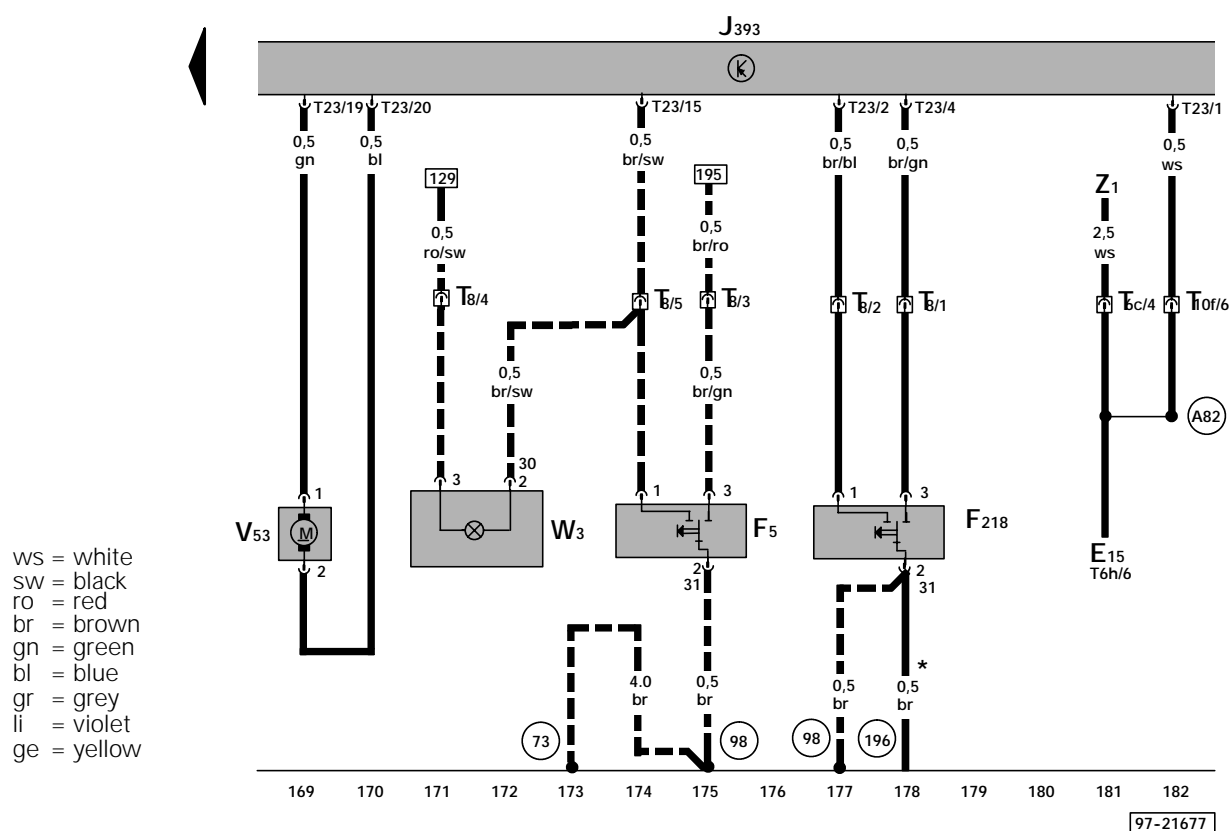

- E15 - Rear window defogger switch
- F5 - Luggage Compartment light switch (wagon only)
- F218 - Switch for central locking, trunk lid
- J393 - Central control module for comfort system
- T6c - 6-Pin Connector, blue, connector station A-pillar, left
- T6h - 6-Pin Connector, black, am Schalter für beheizbare Heckscheibe
- T8 - 8-Pin Connector, black, connector station D-pillar, right (wagon only)
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T23 - 23-Pin Connector
- V53 - Decklid Central Locking System Motor
- W3 - Luggage compartment light (wagon only)
- Z1 - Heated rear window

- (57) - Ground connection, on left rear pillar
- (73) - Ground connection, on roof bow, rear (wagon only)
- (87) - Ground connection -2-, in rear wiring harness
- (98) - Ground connection, in rear lid wiring harness
- (196) - Ground connection -3-, in wiring harness, rear
- (A82) - Connector (heated glass), in instrument panel wiring harness
- * - sedan only
- - - wagon only

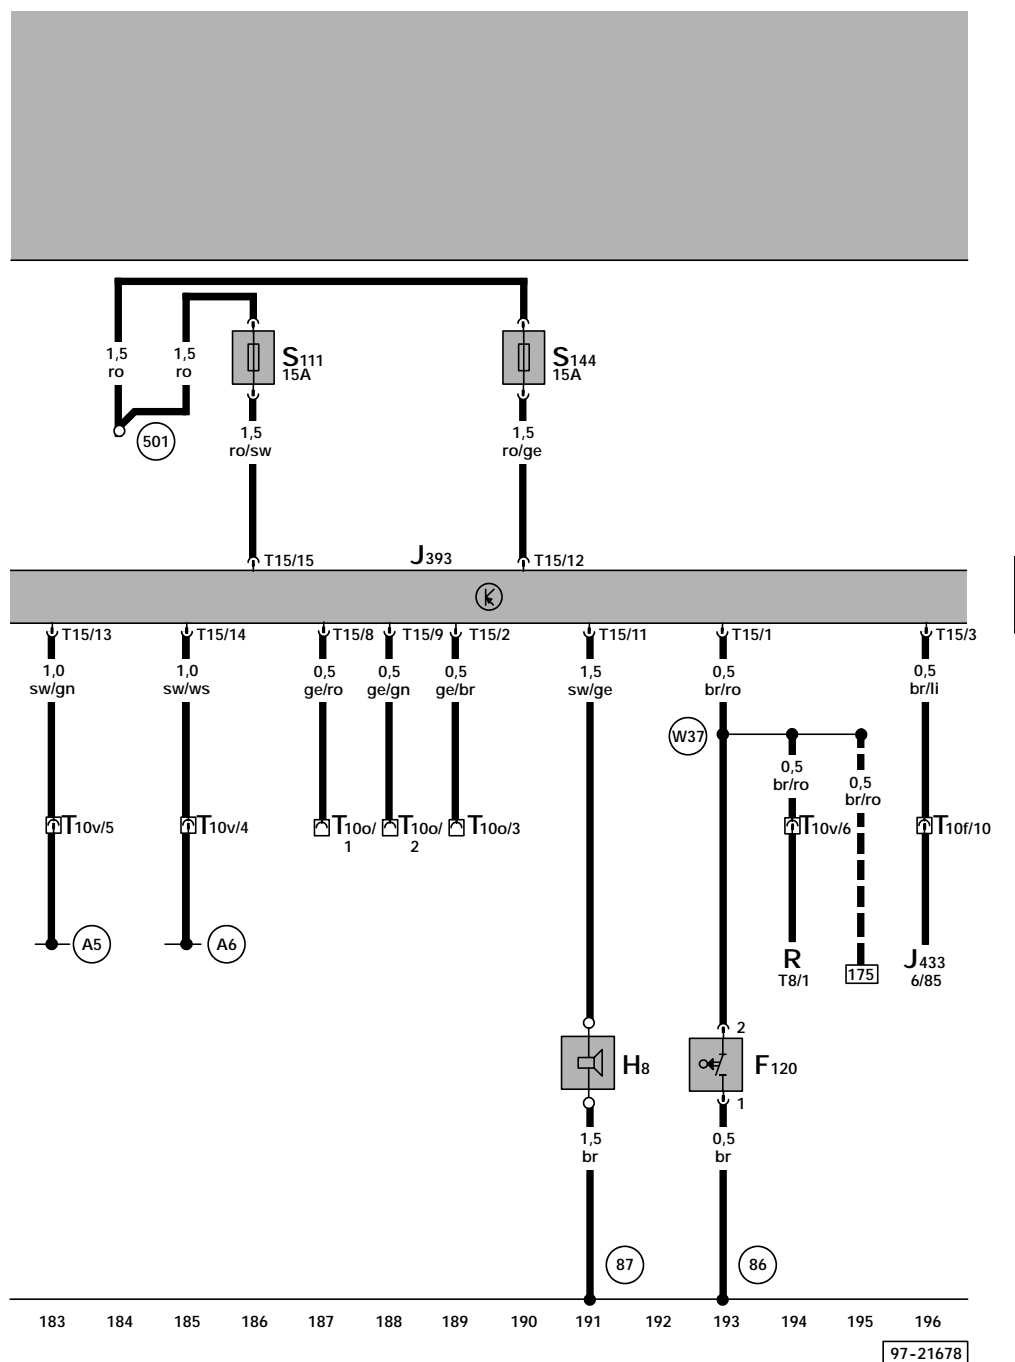


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- F120 - Hood Alarm Switch
 H8 - Alarm Horn
 J393 - Central control module for comfort system
 J433 - Starting Interlock Relay (alarm system), above relay panel
 R - Radio
 S111 - Fuse -1- for Alarm System, on the eightfold auxiliary relay panel, behind relay panel
 S144 - Fuse -2- for Alarm System, on the eightfold auxiliary relay panel, behind relay panel
 T8 - 8-Pin Connector, on radio
 T10f - 10-Pin Connector, blue, connector station A-pillar, left
 T10o - 10-Pin Connector, red, connector station A-pillar, left
 T10v - 10-Pin Connector, violet, connector station A-pillar, right

- T15 - 15-Pin Connector, on Central control module for comfort system
 (86) - Ground connection -1-, in rear wiring harness
 (87) - Ground connection -2-, in rear wiring harness
 (501) - Screw connection -2- (30), on relay panel
 (A5) - plus connection (right turn signal), in instrument panel wiring harness
 (A6) - plus connection (left turn signal), in instrument panel wiring harness
 (W37) - Connector (alarm system), in wiring harness floor

- - - wagon only

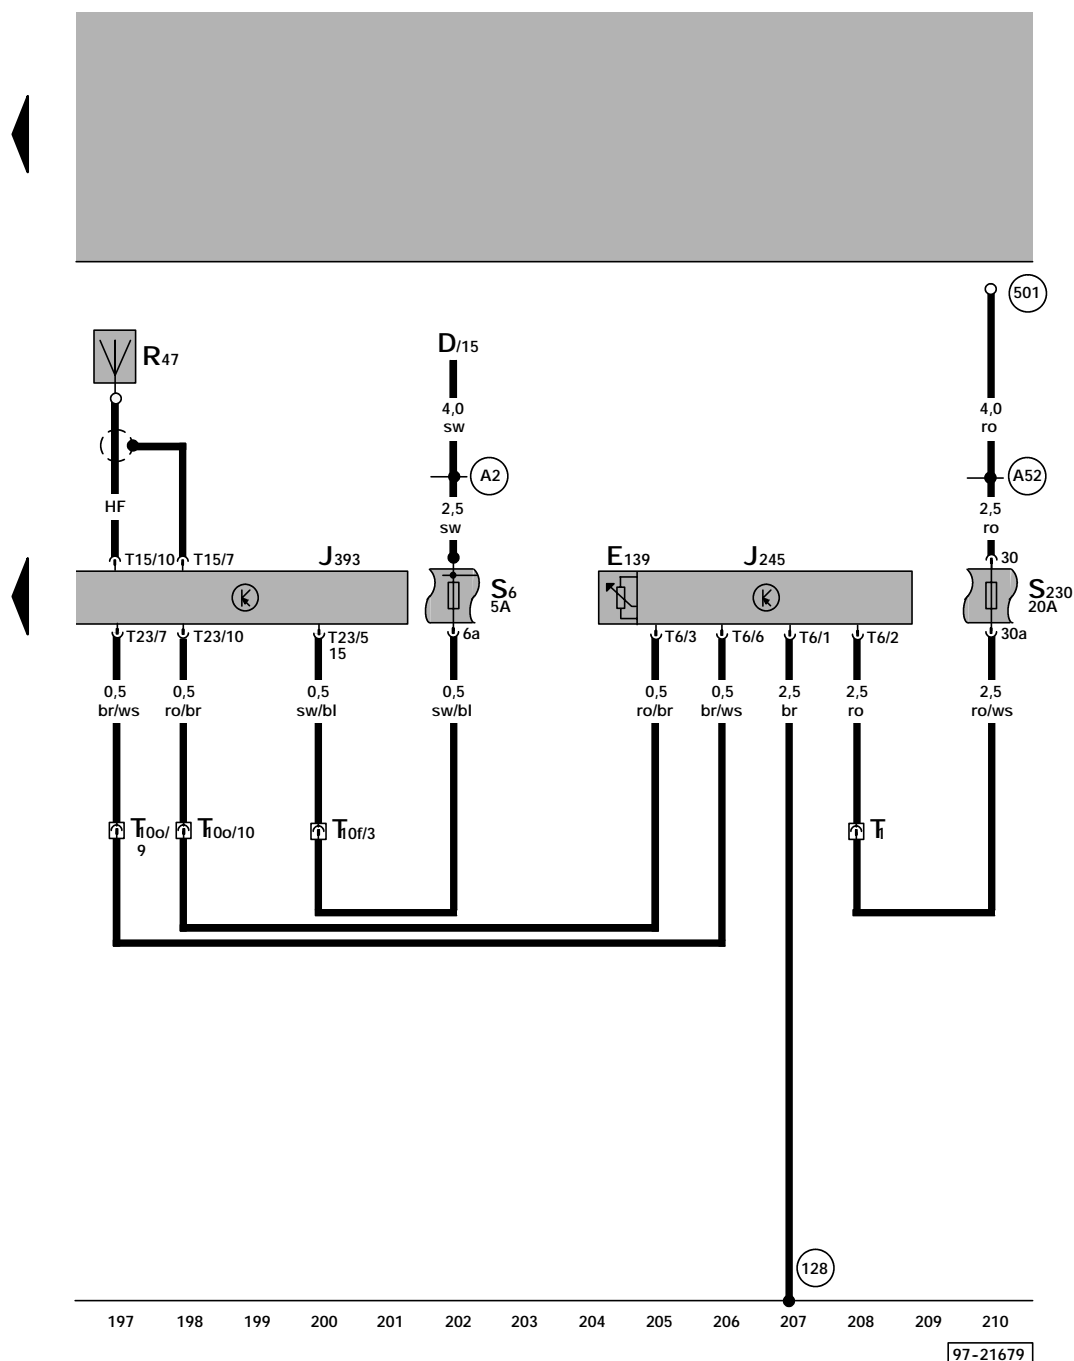

- D - Ignition/Starter Switch
- E139 - Sunroof Regulator
- J245 - Power Sunroof Control Module
- J393 - Central control module for comfort system
- R47 - Antenna wire for central locking and alarm system, on B-pillar right
- S6 - Fuse 6 in fuse holder
- S230 - Fuse 30 in fuse holder
- T1 - Single Connector, black
- T6 - 6-Pin Connector
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10o - 10-Pin Connector, red, connector station A-pillar, left
- T15 - 15-Pin Connector, on Central control module for comfort system
- T23 - 23-Pin Connector

- (128) - Ground connection -1-, in interior light wiring harness
- (501) - Screw connection -2- (30), on relay panel
- (A2) - plus connection (15), in instrument panel wiring harness
- (A52) - plus connection (30), in instrument panel wiring harness